

# CODE ALARM

## Remote Transmitter Programming Guide

### Remote Transmitter Programming

1. Turn the ignition ON.
2. Press and hold the valet/override button.
3. Within 10 seconds the system will chirp (3) three times.
4. Press 1 button of each transmitter you wish to program.
5. The system will respond with 1 chirp for each accepted transmitter.
6. Turn the ignition OFF to exit programming.

#### NOTES:

- Pressing the override button at anytime during programming will advance to the next bank.
- The system will exit transmitter programming after 15 seconds of inactivity.
- This system has 1 button programming which programs all channels of the system.
- The system will hold up to 4 transmitters in memory, programming a 5th transmitter will erase the oldest transmitter in memory.
- PTN - Programmed Transmitter Notification. Each time the ignition is turned ON, the LED will flash the number of transmitters programmed to the system. (Models 2010-Present)



For more information please contact Voxx Electronics Customer Service at  
1-800-225-6074