CROSLEY ELECTRIC RANGE

CREW3874RW/B/S

BAKE ASSIST TEMPS

Bake Assist Temps offer preset temperature settings to make cooking even more convenient. Just select a temperature, press start and let the oven do the rest

CUSTOM BROIL

Use this setting to broil in five degree-increments to melt cheese, sear steak or toast those buns with more precision.

VERSATILE COOKTOP

Our multiple element options provide up to 3000 watts on the largest burner to help you cook more of your favorites at the same time.

LARGE OVEN CAPACITY (4.8 CU. FT.)

Large Oven Capacity gives you the space you need to make dinner and dessert at the same time.

	-CR-051 E+	
1		6
and the second second		
and the second second		
and the second second		
		_

INDICATOR LIGHTS

Check your oven's status and settings at a glance with the Indicator Lights.

EASY TOUCH ELECTRONIC CONTROLS PLUS

It's smooth sailing on casserole night when you can set bake or broil temperatures with our Easy Touch Electronic Controls

SELF CLEAN OPTION

No need to scrape and scrub with the Self-Clean Option. Use this setting to let your range do the dirty work for you in just two to four hours.