CROSLEY GAS RANGE

CRGW3487RW/B/S

BAKE ASSIST TEMPS

Bake Assist Temps offer preset temperature settings to make cooking even more convenient. Just select a temperature, press start and let the oven do the rest

5 BURNERS

With an extra burner, you have the flexibility to prepare your meal without juggling pots and pans, getting you to dinner faster.

VARIABLE BROIL

Variable broil brings the best results out of broiling with just the right temperatures for quick-cooking tasty meals.

DELAY BAKE SETTING

With the Delay Bake setting, you can place your dishes inside the oven and schedule when you want the baking to begin so your food is ready when you are.

EASY TOUCH ELECTRONIC CONTROLS PLUS

Quickly select bake or broil temperatures with these large and easy-to-read Easy Touch Electronic Controls Plus.

SIMMER BURNER

The simmer burner provides 800 to 5,000 BTUs of precise, adjustable heat to give your gas range both a full-power simmer burner and warming setting all in one.

HIGH TEMP SELF CLEAN

Fight the toughest baked-on foods in your oven with this high-heat, self-cleaning technology.

LARGE OVEN CAPACITY (5.0 CU. FT.)

Cook the whole meal with plenty of space in this 5.0 cu. ft. capacity electric range.

