



AONIC 50

Wireless Headphones

Shure AONIC 50 wireless noise-cancelling headphones manual (Model: SBH2350). Find how to pair, specifications, troubleshooting, and ShurePlus PLAY app use.
Version: 1.7 (2024-K)

Table of Contents

AONIC 50 Wireless Headphones	3	Frequently Asked Questions - FAQ	11
Bluetooth® Pairing	3	Storage	11
Multipoint pairing	3	Accessories	11
Using the Buttons	4	Furnished Accessories	11
LED Indicator	5	Replacement Parts	12
Auto Power Off	6	Specifications	12
ShurePlus PLAY Mobile Listening App	6	SAFETY PRECAUTIONS	13
General Description	6	WARNING FOR ALL EARPHONES!	13
Environment mode	6	SAFETY PRECAUTIONS	13
Active noise cancellation	7	WARNING	13
Create Custom Presets	8	CAUTION	13
Adjusting EQ	9	IMPORTANT SAFETY INSTRUCTIONS	14
Preset Modes	10	For Products That Use Bluetooth	14
Update the Firmware for Shure AONIC Products	10	CAUTION	14
Cable connections	10	WARNING	15
Care and Maintenance	11	Certifications	15
		LIMITED WARRANTY	15

AONIC 50

Wireless Headphones

Bluetooth® Pairing

Headphones automatically enter pairing mode when you power them on the first time or when they have not been previously paired with this audio source.

1. From your audio source, select "Shure AONIC 50"
2. When successfully paired, you hear "Connected"

Headphones automatically pair with previously paired devices when you power them on. After a few seconds you will hear "Connected."

Manual pairing

1. Turn off the headphones
2. Press and hold the power button for 5 seconds
3. When you hear "Bluetooth pairing mode," release the button
4. From your audio source, select "Shure AONIC 50"
5. When successfully paired, you hear "Connected"

Note: If the pairing fails on the first attempt, repeat the process from the beginning.

To customize the listening features of your device, download the free ShurePlus™ PLAY app for iOS and Android.

Multipoint pairing

AONIC 50 headphones support Bluetooth multipoint pairing which enables the headphones to be connected to two devices at the same time. AONIC 50 will remain connected to both devices and receive inputs alternately.

If you are having difficulty with your AONIC 50 headphones and multipoint pairing, follow these steps:

1. Clear the AONIC 50's paired devices list (PDL) from the PLAY app
2. Clear the AONIC 50 from any previously paired devices
3. Power off the AONIC 50 headphones
4. Press and hold the AONIC 50 power button for 5 seconds
5. When you hear "Bluetooth pairing mode," release the button
6. Select "Shure AONIC 50" on the first mobile device
7. When successfully paired, you hear "Connected"
8. Disable Bluetooth on that mobile device
9. Power off the AONIC 50 headphones
10. Press and hold the AONIC 50 power button for 5 seconds to enter Bluetooth pairing mode again
11. Connect to other device
12. Turn on Bluetooth on the first cellular phone and select "Shure AONIC 50" in settings

You will not hear a "Connected" prompt but you will see that the headphones are connected to both of the devices.

Use the ShurePlus PLAY app to select how you want the audio to work in multipoint pairing:

- Static - Your current audio connection is unaffected if a second audio source begins to play.

- Dynamic - Your audio connection switches to the most recently played audio source.

Using the Buttons



Power button

Power on	Press and hold, 2 seconds
Power off	Press and hold, 2 seconds
Pair Bluetooth	1. Turn off the headphones 2. Press and hold, 6 seconds
Check battery status	Double press (audible status notification)
Reset paired devices list	1. Turn off the headphones and plug into a charger 2. Press and hold, 7 seconds



Center button

Play/Pause	Press once
Next track	Double press
Previous track	Triple press
Answer/End a call	Press once
Decline a call	Press and hold, 2 seconds
Activate voice assistant	Press and hold, 2 seconds



Side buttons

Volume up	Press +
Volume down	Press -



Environment mode/ANC switch


Environment mode	Push switch up
Active Noise Cancellation	Push switch down

Hardware reset

If the buttons do not respond to repeated presses, you can perform a hardware reset to force a power off.

- 1. Press the +, -, and power buttons simultaneously to immediately power off the headphones. This does not reset any values you may have changed.
- 2. Power on the headphones.

LED Indicator

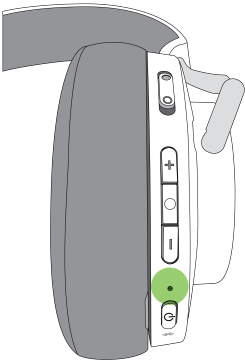

LED Indicator

Bluetooth pairing	Alternating red and blue
Bluetooth connected	Blue for 2 seconds, then off
Bluetooth connection lost	Slow blinking blue
Low battery	Slow blinking red
Charging	Red

Auto Power Off

You can configure the Auto Power Off feature in the PLAY app to turn off your headphones when not in use:

1. Select When to Charge
2. Specify the auto power off time in Power Off When Disconnected
 - After 10 Minutes (default)
 - After 1 Hour
 - After 4 Hours
 - Never

ShurePlus PLAY Mobile Listening App

General Description

The ShurePlus PLAY Mobile Listening App is a high-resolution music player with advanced EQ controls. Play uncompressed audio files with your iOS or Android mobile device using the music tab. Use built-in Shure EQ presets to customize the sound, or create your own EQ presets in the settings tab. Unlock environment mode and ANC features by connecting to Shure wireless and True Wireless products in the device tab.

Features


- Import and play multiple, high-resolution and standard file types
- Customize presets with the parametric graphic EQ
- Adjust your volume with the full-screen fader
- Create playlists and organize your music library by playlist, artist, album title, song title, genre, or composer
- Quickly dial in your sound with EQ preset modes for a variety of listening situations.

Environment mode

Environment mode allows you to accentuate the ambient noise around you. This is especially useful when you want to listen to music or are on a phone call, yet you still want to be aware of the sounds around you.

To use environment mode, push the vertical switch on the back of the right earcup to the up position.

In the ShurePlus PLAY app, you can adjust the environment mode across ten levels:

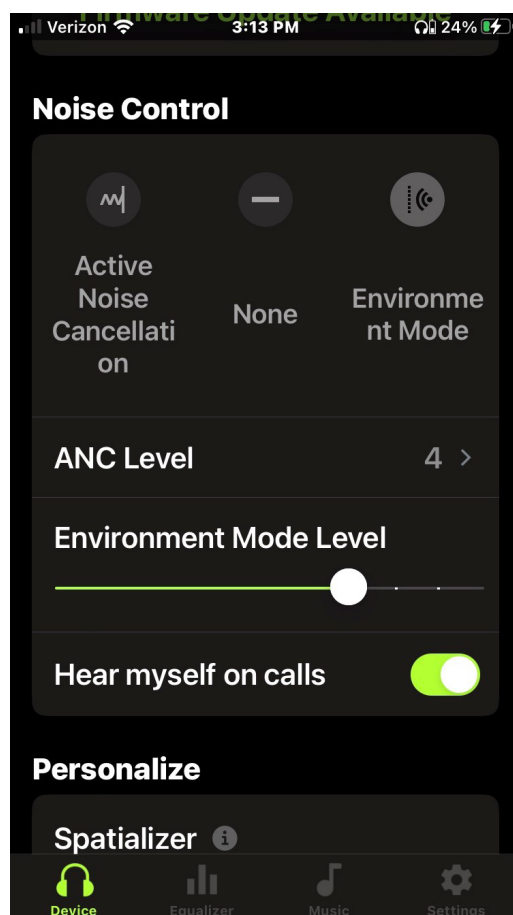


Active noise cancellation

Active Noise Cancellation (ANC) allows you to suppress some or all of the noise around you. This is especially useful when travelling where road noise in a car, bus, or train, or jet noise in an airplane can force you to increase the volume.

To use ANC, push the vertical switch on the back of the right earcup to the down position.

In the ShurePlus PLAY app, you can adjust the ANC between two levels:

- Max
- Normal

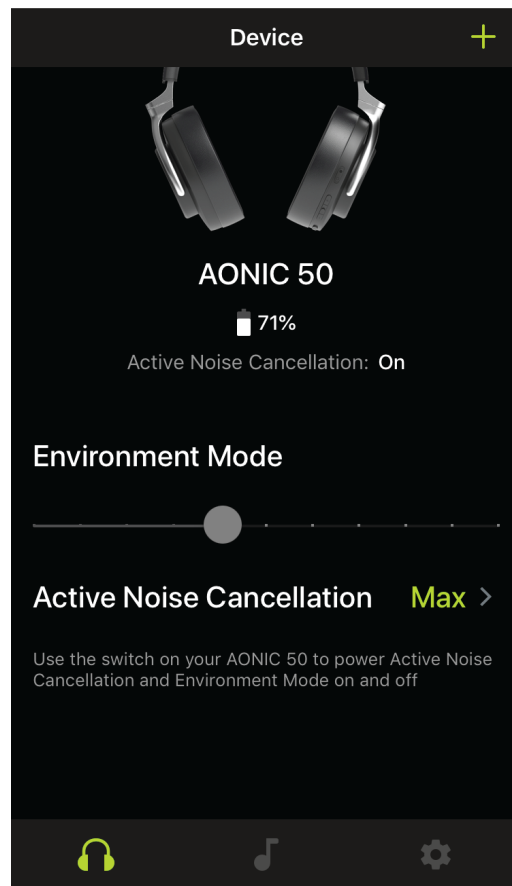

Create Custom Presets

Add New Preset


1. Scroll down to tap Add New Preset or tap Manual. New presets start out flat.
2. Adjust your frequency, gain, and bandwidth parameters. There are three ways to adjust your equalizer.
 - Tap the values to type in a specific number.
 - Tap the - or + to adjust in larger increments.
 - Tap and drag the numbered circles for bigger changes.
3. Tap Save to name and save your new custom preset. Custom presets will show up after the list of Shure presets.

Duplicate a Preset

You can duplicate both Shure and custom presets. Duplicating a preset is convenient if you like the way a preset sounds but you want to make and keep adjustments to the sound.

1. Start by selecting an already existing preset.
2. Tap the More Options 3 dots and select Duplicate.
3. Scroll down to find your duplicate preset in the list of custom presets.
4. Tap the More Options 3 dots and select Edit.
5. Adjust your frequency, gain, and bandwidth parameters. Type in a specific number. Tap - or + to adjust in small increments. Or manually tap and drag the numbered circles for larger changes.
6. Tap Save to save your new custom preset.

Adjusting EQ

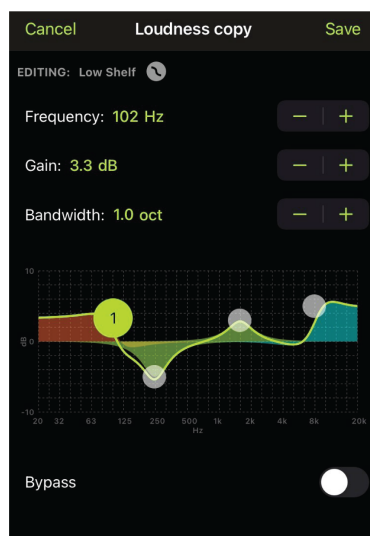

Select and adjust frequency, gain, and bandwidth in the equalizer.

Equalization Explained

The 4-band parametric equalizer is used to adjust the volume of independent, adjustable frequency ranges, to precisely shape the frequency response. The equalizer can be bypassed for a flat frequency response.

Frequency	Select the center frequency of the filter to cut/boost.
Gain	Adjusts the level for a specific filter.
Bandwidth or Q	Adjusts the range of frequencies affected by the filter. The value is represented in octaves.

Commonly used EQ Adjustments

Treble boost for improved speech intelligibility: Add a high shelf filter to boost frequencies greater than 1 kHz by 3-6 dB

Ambient HVAC noise reduction: Add a low cut filter to attenuate frequencies below 200 Hz

Reduce flutter echoes and sibilance: Identify the specific frequency range that "excites" the sound:

1. Set a narrow Q value
2. Increase the gain to between +10 and +15 dB, and then experiment with frequencies between 1 kHz and 6 kHz to pinpoint the range of flutter echoes or sibilance
3. Reduce the gain at the identified frequency (start between -3 and -6 dB) to minimize the unwanted sound

Reduce hollow, resonant sound: Identify the specific frequency range that "excites" the sound and lower it:

1. Set a narrow Q value
2. Increase the gain to between +10 and +15 dB, and then experiment with frequencies between 300 Hz and 900 Hz to pinpoint the resonant frequency
3. Reduce the gain at the identified frequency (start between -3 and -6 dB) to minimize the unwanted sound

Preset Modes

Use presets to quickly access commonly used listening scenarios. Seven selectable 4-band presets optimize settings for gain, equalization, and compression. Play a song and find the preset that you think suits the song best, and then adjust levels as needed.

Preset	Application
Bass Boost	Increase low frequencies
Bass Cut	Decrease low frequencies
Treble Boost	Increase high frequencies
Treble Cut	Decrease high frequencies
Vocal Boost	Increase vocal clarity by emphasizing the vocal range
De-ess	Decrease vocal hiss/ sibilance in speech
Loudness	Clarity for listening at low volume. Both the bass and treble frequencies are boosted to make the overall sound feel louder.

Update the Firmware for Shure AONIC Products

To take advantage of additional features and design enhancements, connect your AONIC product to a mobile device running the ShurePlus PLAY app, available for [Android](#) and [iOS](#).

1. Turn on Bluetooth and pair the AONIC product to your mobile device.
2. Open the ShurePlus PLAY app.
3. Updates appear on the home screen or the settings screen. Tap to update.
 - To update, you need **at least 50% battery charge** on the AONIC product and your mobile device.
 - Firmware downloads can take **up to 30 minutes**.
4. Wait until the "Update Completed" confirmation screen appears.
 - Do not turn off the AONIC product until the update completes.
 - Do not put earphone adapters back into their case. It will stop the update.

Tips:

- Make sure that the mobile device and your AONIC product are **on** and **near** one another.
- Turn on **Do Not Disturb** to avoid interruptions while downloading the update.
- Stay inside the PLAY app and ensure that your screen is on.
- Do not use the AONIC product or mobile device while the firmware is downloading. This slows or stops the firmware update.
- Do not update in areas with high volume mobile or WiFi wireless activity, like a plane or train station. This interference can slow or stop the update.
- If the update fails, quit the app completely. You may need to force quit the app so that it isn't running in the background. Wait 5 minutes before opening the app and trying again.
- If you are updating earphones and both do not automatically connect, tap the music tab and then tap back to the device tab.

Contact [Shure Service and Repair](#) if you experience any issues.

Cable connections

The headphones can also use two different cables to access audio instead of using the wireless feature:

- **USB-C:**
 - Charge the headphones
 - Connect to digital audio
- **3.5 mm audio cable:** Connect to an analog audio port

Care and Maintenance

To clean the headphones, use a soft, damp cloth.


CAUTION: Do not use cleansers that contain solvents. Keep liquid and foreign objects out of the driver openings.

Frequently Asked Questions - FAQ

For more information, or to view other Frequently Asked Questions, visit the [Shure FAQ](#).

Storage

Store headphones in protective case when not in use.

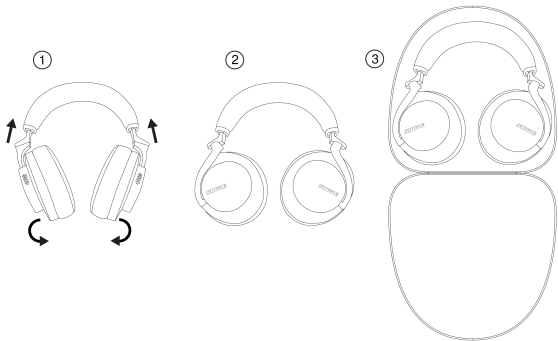

Accessories

Furnished Accessories

REPL SBH2350 CASE ONLY	RPH-SBH2350-CASE
REPL USB-C to USB-A CABLE 1M	RPH-CABLE-USB

REPL 2.5-3.5MM CABLE 1.5M

RPH-CABLE-AUDIO

Replacement Parts

SBH2350 REPLACEMENT EARPADS (BLACK)	SBH2350-BK-PADS
SBH2350 REPLACEMENT EARPADS (DARK BROWN)	SBH2350-BR-PADS
SBH2350 REPLACEMENT EARPADS (WHITE)	SBH2350-WH-PADS

Specifications

Model/Model:

SBH2350

Transducer Type

Dynamic, Neodymium magnet

Driver Size

50 mm

Frequency Response

20 to 22,000 Hz

Sensitivity

@ 1 kHz

97.5 dB/mW

Impedance

@ 1 kHz

39 Ω

Maximum Input Power

100 mW

Weight

334 g (11.8oz.)

Operating Temperature

0°C to 45°C (32°F to 113°F)

Storage Temperature

-10°C to 45°C (14°F to 113°F)

Antenna Type

Internal Monopole

Gain

+2.05 dBi

Operating Frequency

2402 MHz-2480 MHz

Modulation Type

FHSS

RF Output Power

+4 dBm (EIRP)

Supported Codecs

aptX, aptX HD, aptX Low Latency, SBC, AAC, LDAC

SAFETY PRECAUTIONS

Before using this product, please read and save the enclosed warnings and safety instructions.

WARNING FOR ALL EARPHONES!

Use, clean, and maintain earphones according to manufacturer's instructions.

SAFETY PRECAUTIONS

The possible results of incorrect use are marked by one of the two symbols—"WARNING" and "CAUTION"—depending on the imminence of the danger and the severity of the damage.

	WARNING: Ignoring these warnings may cause severe injury or death as a result of incorrect operation.
	CAUTION: Ignoring these cautions may cause moderate injury or property damage as a result of incorrect operation.

WARNING

- If water or other foreign objects enter the inside of the device, fire or electric shock may result.
- Do not attempt to modify this product. Doing so could result in personal injury and/or product failure.
- Do not use when a failure to hear your surroundings could be dangerous, such as while driving, or when biking, walking, or jogging where traffic is present and accidents could occur.
- Keep this product and its accessories out of reach of children. Handling or use by children may pose a risk of death or serious injury. Contains small parts and cords that may pose risk of choking or strangulation.
- Stop using the earphones and consult a medical professional if you experience irritation, excessive wax buildup, or other discomfort.

CAUTION

- Never disassemble or modify the device, as failures may result.
- Do not subject to extreme force and do not pull on the cable or failures may result.
- Keep the earphone dry and avoid exposure to extreme temperatures and humidity.

- If you are currently receiving ear treatment, consult your physician before using this device.



High sound pressure

Hearing damage risk

To prevent possible hearing damage, do not listen at high volume levels for long periods.

IMPORTANT SAFETY INSTRUCTIONS

1. READ these instructions.
2. KEEP these instructions.
3. HEED all warnings.
4. FOLLOW all instructions.
5. DO NOT use this apparatus near water.
6. CLEAN ONLY with dry cloth.
7. DO NOT block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. DO NOT install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. PROTECT the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
10. ONLY USE attachments/accessories specified by the manufacturer.
11. UNPLUG this apparatus during lightning storms or when unused for long periods of time.

For Products That Use Bluetooth

WARNING

- Follow instructions from manufacturer.
- Product battery may explode or release toxic materials. Risk of fire or burns. Do not open, crush, modify, disassemble, heat above 140°F (60°C), or incinerate.
- Attention should be drawn to the environmental aspects of battery disposal.
- Product shall not be exposed to excessive heat such as sunshine, fire, or the like.
- Do NOT make unauthorized alterations to this product.

CAUTION

- Follow applicable laws regarding mobile phone and headphone use while driving.
- This product contains magnetic material. Consult your physician on whether this might affect your implantable medical device.
- Batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like
- Batteries (battery pack or batteries installed) shall not be crushed or cut
- Batteries (battery pack or batteries installed) shall not be subjected to extremely low air pressure
- Risk of fire or explosion if the battery is replaced by an incorrect type

CAUTION

- Never disassemble or modify the device, as failures may result.
- Do not subject to extreme force and do not pull on the cable or failures may result.

- Keep the product dry and avoid exposure to extreme temperatures and humidity.

WARNING

- If water or other foreign objects enter the inside of the device, fire or electric shock may result.
- Do not attempt to modify this product. Doing so could result in personal injury and/or product failure.

Note: Battery replacement to be performed only by Shure authorized service personnel.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: Testing is based on the use of supplied and recommended cable types. The use of other than shielded (screened) cable types may degrade EMC performance.

低功率射頻器材技術規範

取得審驗證明之低功率射頻器材，非經核准，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。低功率射頻器材之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。前述合法通信，指依電信管理法規定作業之無線電通信。低功率射頻器材須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

Certifications

Visit www.shure.com for the latest regulatory and compliance information.

Note: Testing is based on the use of supplied and recommended cable types. The use of other than shielded (screened) cable types may degrade EMC performance.

This product meets the Essential Requirements of all relevant European directives and is eligible for CE marking.

CE Notice:

Hereby, Shure Incorporated declares that this product with CE Marking has been determined to be in compliance with European Union requirements. The full text of the EU declaration of conformity is available at the following site: <https://www.shure.com/en-EU/support/declarations-of-conformity>.

Authorized European Importer:

Shure Europe GmbH
Department: Global Compliance
Jakob-Dieffenbacher-Str. 12
75031 Eppingen, Germany
Phone: +49-7262-92 49 0
Fax: +49-7262-92 49 11 4
Email: EMEAsupport@shure.de

LIMITED WARRANTY

Shure Incorporated ("Shure") hereby warrants to the original consumer purchaser only that, except as otherwise specified below, this product will be free in normal use of any defects in materials and workmanship for a period of two (2) years from the consumer's original date of purchase directly from Shure or from a Shure-authorized reseller.

Any rechargeable batteries contained in or packaged with this product are so warranted for a period of one (1) year from the consumer's original date of purchase. However, rechargeable batteries are consumable and their capacity will be reduced over time based on temperature, amount of time in storage, charging cycles, and other factors; hence reduction in battery capacity does not constitute a defect in material or workmanship.

At its sole option, Shure will repair or replace the defective product and promptly return it to you. In order for this warranty to be valid, the consumer must, at the time the product is returned, provide proof of purchase in the form of the original purchase receipt directly from Shure or from a Shure-authorized reseller. If Shure elects to replace the defective product, then Shure reserves the right to replace the defective product with another product of the same model or a model of at least comparable quality and features in Shure's sole determination.

If you believe this product is defective within the warranty period, carefully repack the unit, insure it and return it with proof of purchase, postage prepaid, to Shure Incorporated, Attention: Service Department, at the address below.

Outside of the United States, return the product to your dealer or Authorized Service Center. Addresses are listed on www.Shure.com or can be obtained by contacting Shure at the address listed below.

This warranty is not transferable. This warranty does not apply in cases of abuse or misuse of the product, use contrary to Shure's instruction, ordinary wear and tear, an act of God, negligent use, purchase from a party other than Shure or a Shure-authorized reseller, unauthorized repair, or modification of the product.

ALL IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY DISCLAIMED TO THE EXTENT PERMITTED UNDER APPLICABLE LAWS AND, TO THE EXTENT NOT PERMITTED, ARE HEREBY LIMITED TO THE DURATION AND TERMS OF THIS WARRANTY. SHURE ALSO HEREBY DISCLAIMS ALL LIABILITY FOR INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitation may not apply to you. This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

This warranty does not restrict the rights of the consumer mandated under applicable laws.

THIS WARRANTY SUPERSEDES ALL OTHER WARRANTIES THAT ARE ASSOCIATED OR INCLUDED WITH THIS PRODUCT, EXCEPT THAT ANY SOFTWARE CONTAINED IN OR PACKAGED WITH THIS PRODUCT IS EXCLUDED FROM THIS WARRANTY AND INSTEAD SHALL BE COVERED BY THE WARRANTY, IF ANY, PROVIDED IN SHURE'S END USER LICENSE AGREEMENT ACCOMPANYING SUCH SOFTWARE.