III. Learning Function

If the vehicle has a spare tire or hitch on the back, the ordinary parking assist system may detect the tire or hitch which would result in a continuous false alarm. The learning function on this device can easily remove false alarms and it will remember the tire or hitch as part of the vehicle, correcting the alarm. **Learning Function Activation:** Make sure there are no objects within 8 feet from the rear of the vehicle. When the ACC is switched to the ON position, shift the vehicle from PARK to REVERSE and back continuously 5 times within 10 seconds, after doing this the LED light on the display will flash three times. The flashing LED will confirm that the learning function is activated and the system will remember the tire/hitch/bike holder's, location automatically. NOTE: When the hitch or tire has been removed, you will have to relearn the parking assist system so it knows that obstruction has been removed.






TE-BR4PSKProduct Manual

The iBEAM TE-BR4PSK parking sensor kit consists of ultrasonic rubber sensors, and a control box. The system detects the distance between the vehicle and any obstructions with the use of the ultrasonic rubber sensors mounted in the bumper and audible warning will be heard.

III. Learning Function

If the vehicle has a spare tire or hitch on the back, the ordinary parking assist system may detect the tire or hitch which would result in a continuous false alarm. The learning function on this device can easily remove false alarms and it will remember the tire or hitch as part of the vehicle, correcting the alarm. Learning Function Activation: Make sure there are no objects within 8 feet from the rear of the vehicle. When the ACC is switched to the ON position, shift the vehicle from PARK to REVERSE and back continuously 5 times within 10 seconds, after doing this the LED light on the display will flash three times. The flashing LED will confirm that the learning function is activated and the system will remember the tire/hitch/bike holder's, location automatically. **NOTE:** When the hitch or tire has been removed, you will have to relearn the parking assist system so it knows that obstruction has been removed.

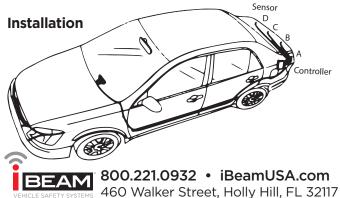



TE-BR4PSKProduct Manual

The iBEAM TE-BR4PSK parking sensor kit consists of ultrasonic rubber sensors, and a control box. The system detects the distance between the vehicle and any obstructions with the use of the ultrasonic rubber sensors mounted in the bumper and audible warning will be heard.

I. Specifications


Rated Voltage: 12V (9-16V) Rated Current: 20mA~200mA

Detecting Distance: Rear (0' - 5') Front (0' - 2.5')

Ultrasonic Frequency: 40Khz Working Temperature: -22°~176°F

II. Connection

- 1) Sensors should be 1.5 to 2.5 feet from the ground, and 4" to 7" inches apart from each other (depending on vehicle application).
- 2) Install parking sensors by drilling holes out of the back bumper with the supplied 21mm hole saw

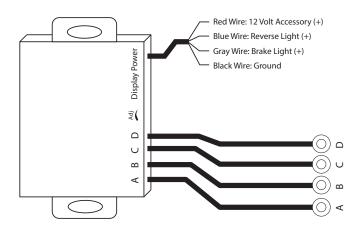

bit (make sure the thicker side of the sensor is facing down, level with the ground and the UP arrow on the back of the sensor is facing up), and install parking sensors.

- 3) The rear sensors A/B/C/D should be installed from left to right (looking at the bumper). This is also how they should be plugged into the control box. (Example A: left, B: mid-left, C: mid-right, D: right)
- 4) Connect the RED wire to the +12 volt accessory wire.
- 5) Connect the BLUE wire to the +12 volt reverse light wire.
- 6) Connect the BLACK wire to a ground (a metal, non-painted surface).
- 7) Plug that wiring harness into the parking sensor control box (labeled power).
- 8) Run the audible warning device cable through the vehicle and mount somewhere in vehicle's cabin where the device can be clearly heard with no obstructions (avoid placing cable where it can get pinched or damaged) and plug cable into the control box.
- 9) Mount the control box in rear of vehicle in a safe place away from rain, heat or humidity.

NOTE: 1) The parking sensors are designed to be used in vehicles with metal bumpers.

2) The parking sensor kit is used as a parking aid. Please use your mirrors and look around to avoid hitting any object.

I. Specifications


Rated Voltage: 12V (9-16V) Rated Current: 20mA~200mA

Detecting Distance: Rear (0' - 5') Front (0'- 2.5')

Ultrasonic Frequency: 40Khz Working Temperature: -22°-176°F

II. Connection

- 1) Sensors should be 1.5 to 2.5 feet from the ground, and 4" to 7" inches apart from each other (depending on vehicle application).
- 2) Install parking sensors by drilling holes out of the back bumper with the supplied 21mm hole saw

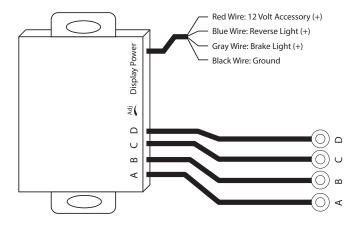

- bit (make sure the thicker side of the sensor is facing down, level with the ground and the UP arrow on the back of the sensor is facing up), and install parking sensors.
- 3) The rear sensors A/B/C/D should be installed from left to right (looking at the bumper). This is also how they should be plugged into the control box. (Example A: left, B: mid-left, C: mid-right, D: right)
- 4) Connect the RED wire to the +12 volt accessory wire.
- 5) Connect the BLUE wire to the +12 volt reverse light wire.
- 6) Connect the BLACK wire to a ground (a metal, non-painted surface).
- 7) Plug that wiring harness into the parking sensor control box (labeled power).
- 8) Run the audible warning device cable through the vehicle and mount somewhere in vehicle's cabin where the device can be clearly heard with no obstructions (avoid placing cable where it can get pinched or damaged) and plug cable into the control box.
- 9) Mount the control box in rear of vehicle in a safe place away from rain, heat or humidity.

NOTE: 1) The parking sensors are designed to be used in vehicles with metal bumpers.

2) The parking sensor kit is used as a parking aid. Please use your mirrors and look around to avoid hitting any object.