



## CH-12PWRH

Accessory Power Outlet T-Harness

1. Unplug the factory wire harness from the back of the power outlet.
2. Plug the factory harness into the female plug on the CH-12PWRH.
3. Plug the male connector on the CH-12PWRH into the power outlet.




4. Connect and crimp power wires.

**RED = Positive (+)**

**BLACK = Negative (-)**

5. Heat connectors to seal.

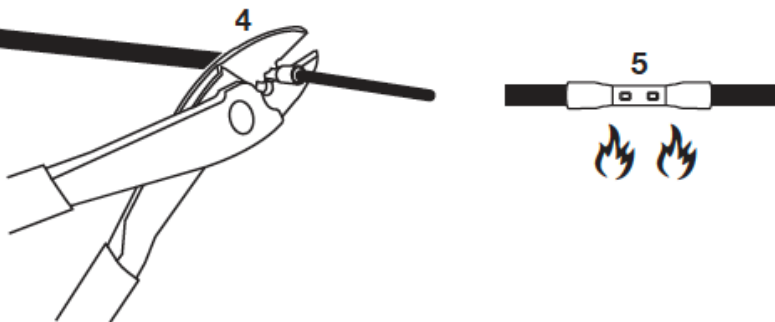

### CAUTION!

Do not exceed vehicle manufactures power outlet load rating.  
If required, in-line fuse should be connected to Positive (+) wire.